



1 Accessories

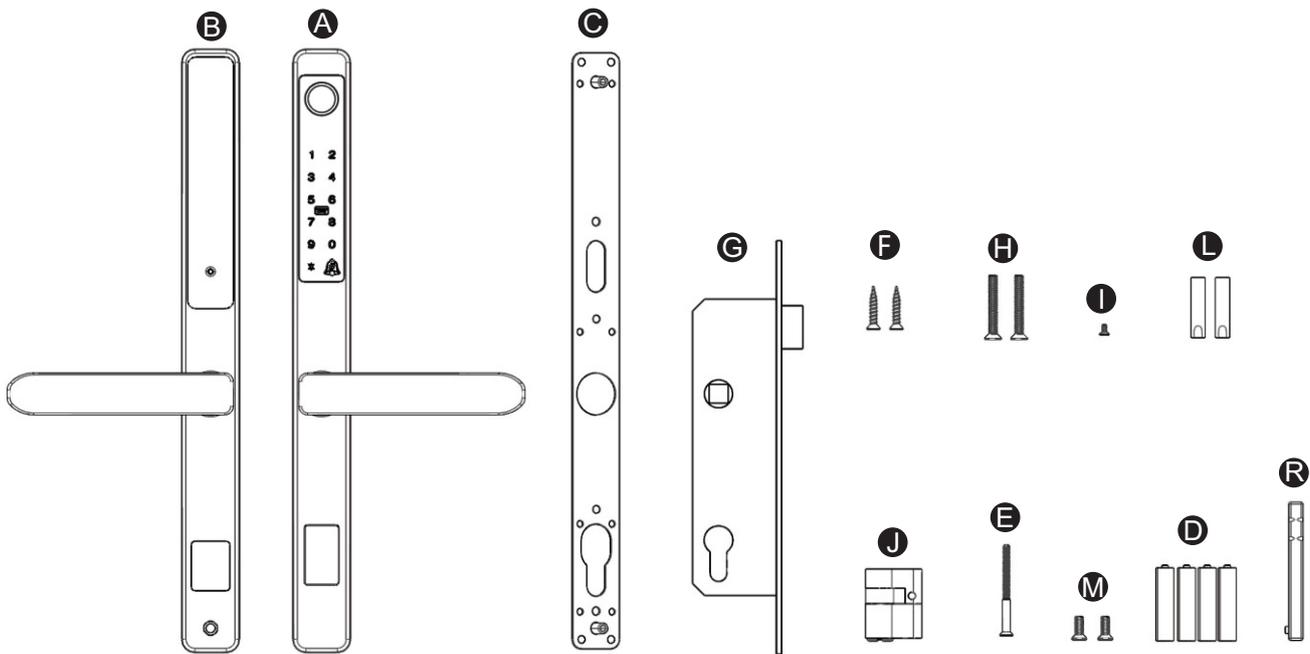


2 How to change open direction and operate on lock body

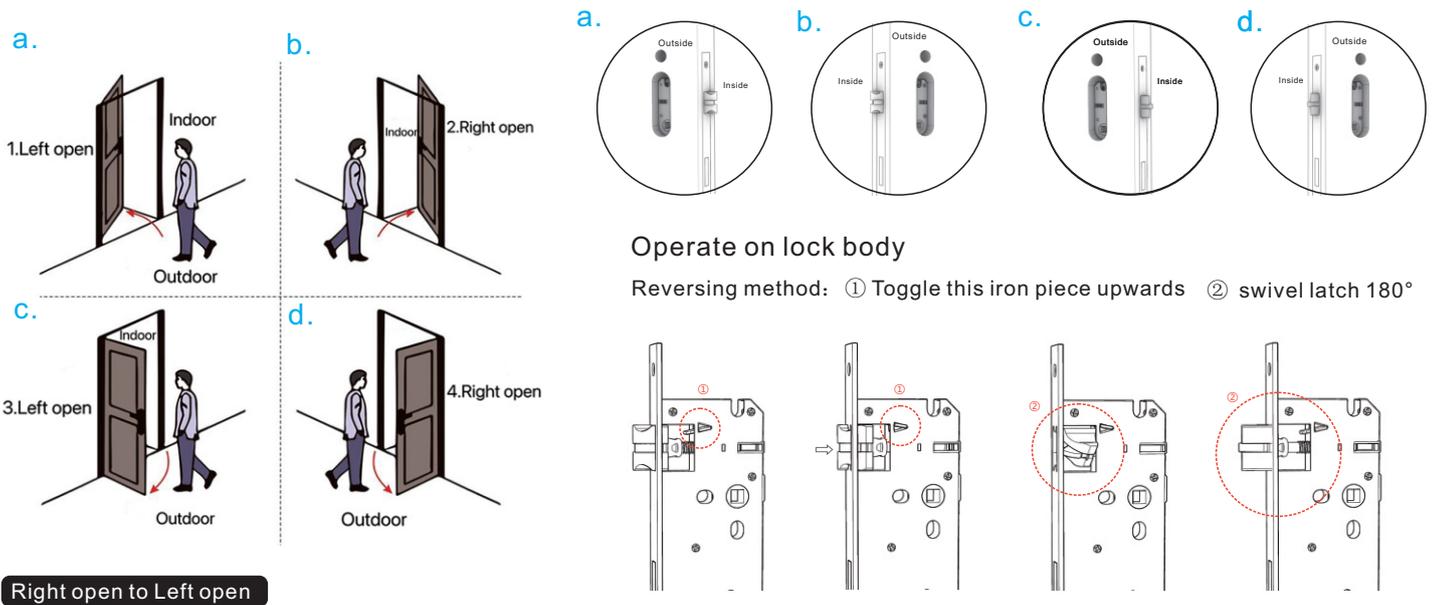

Right open to Left open

- ① Remove the screws and handle
- ② Rotate the handle 180°.
- ③ Install the handle and tighten the screws

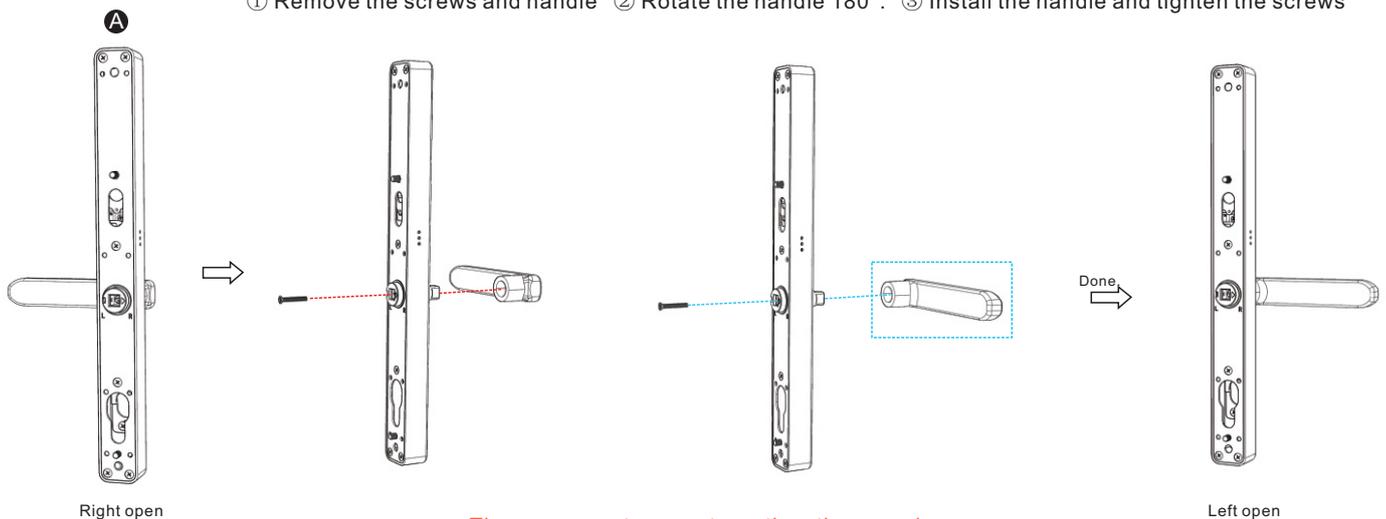


The same way to operate on the other panel.


3 How to make door hole and install lock body

How to drill door hole

- ① Measure the size of door hole. ② Drill the door hole with tool.

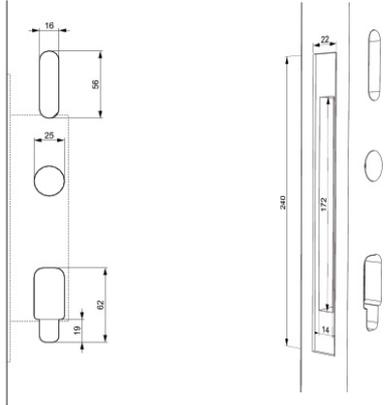

Install lock body

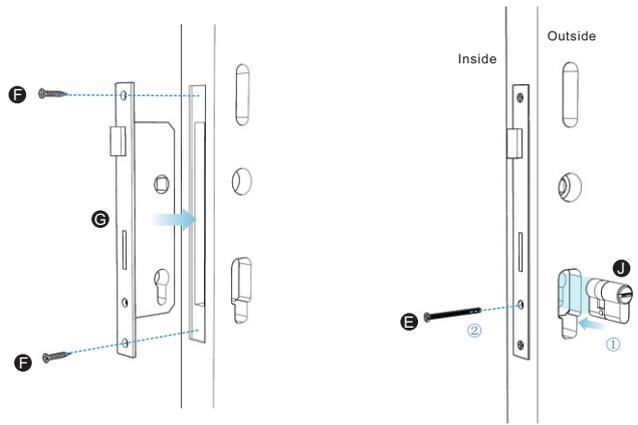


4 Install smart lock


- ① Insert "R" into "A".

- ② Install "L".


Right opening: The triangle points to the right
Left opening: The triangle points to the left

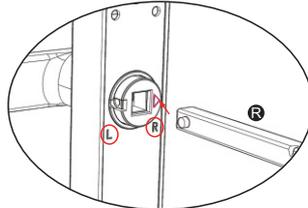

Locking pin can be truncated to the appropriate length if it is too long.

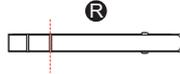


- ③ Screw "H" into "L" and secure "C&A"

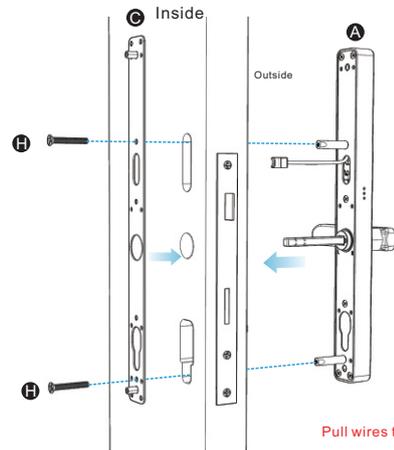

Pull wires through door hole.

- ④ Connect wire terminals


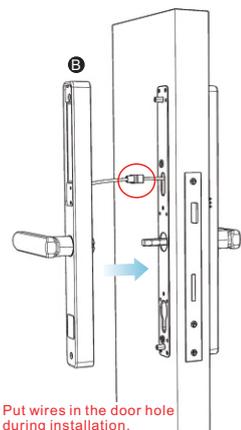


Put wires in the door hole during installation.

- ⑤ Screw in the screws



- ⑥ Put batteries in and cover.

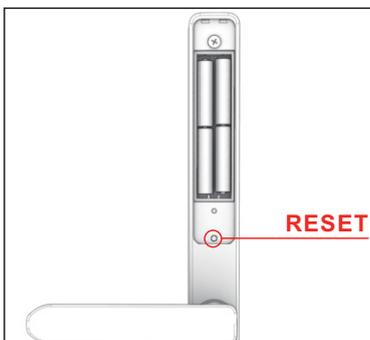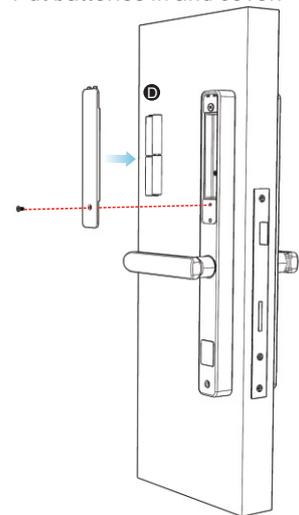

RESET